
SG-L 100100 D

X-Ray Baggage Scanner





Dimensional Drawing

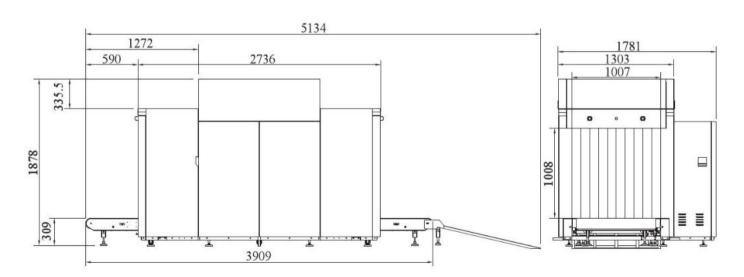

■ General Specifications

■ Wire Resolution

■ Penetration resolution

■ Spatial resolution

■ Penetration

■ Resolution of organic matter

■ Grayscale and mixture resolution

■ Resolution of inorganic objects

■ Effective material resolution

■ X-Ray dosage each inspection

■ Boundary Leakage

■ S/N ratio

■ Conveyor speed

■ Conveyor max load

■ Power consumption

■ Safety performance requirements

■ E M C requirements

Electrical safety

■ Environmental applicability

■ Leakage current

■ Film Safety

■ Weight

■ Operation temperature/Humidity

■ Storage temperature/Humidity

■ Atmospheric pressure

■ Operation Power

■ Operation system

AWG40(top view); AWG40

AWG30(top view); AWG32(side view)

Vertical:1.0mm, horizontal:1.3mm(top view); Vertical:0.8mm, horizontal:1.3mm (side)

34mm(top view); 36mm(side view)

1-120mm

1-60mm

0.2-14mm

Meet the requirements of GB 15208.1-2005

 $\leq 2.5 \mu Sv (uGy)$

 $\leq 0.5 \mu \text{Sv /h}(u \text{Gy/h})$

<60dB

0.2m/s

200kg

0.85K W

Meet the requirements of GB 15208.1-2005

≤5.0mA

Guarantee ASA/I SO 1600 Film

1300kg

5℃-40℃/0%-90%

-20℃-60℃ /10%-90%

86kPa-106kPa AC

220V(±10%-15%) 50±3Hz

LI NU X

Configuration

X ray generator

■ Electric roller

■ Computer

Monnitor

Operation console

160K V, oil cooling, from top to bottom

One- phase

Operating: 1G, Storage: 8G

34" LE D screen, resolution: 3440*1440 pixels

As photo

Scanned images







Functional characteristics









Power-on self-test

With the function of fault self-check, automatically judge the fault and prompt the fault code information in time.

■ Image processing

With the function of Color/ B W, negative, high/low penetration, organic /inorganic stripping, general enhancement, and pseudo color, etc.

■ Image Recall

30 preceding images recallable.

■ The number of images stored

Up to 10,00 images stored automatically.

Real-time curve ■ Time setting

■ Probe setting

The real-time curve can be used to detect whether the acquisition system and components work normally.

System time can be set

It can realize the manual deletion of the low and low energy detection board dead pixels, and display the deleted dead pixels in the display area.

■ Ray source setting

There are two source and analog source control modes, the source parameters of the digital source

■ Alarm system

The alarm function can be activated and deactivated, and the alarm type of the alarm box, sound and light alarm can be selected, and the sensitivity, minimum absorption rate, maximum absorption rate, and alarm duration can be set.

■ Troubleshooting

It can realize whether the components such as the entrance and exit light barrier, side panel switch, emergency stop switch and light source are normal, and display the standard value and current value of the detection voltage

■ Image setting

The drum running control direction and the image display moving direction can be set.

■ Software registration

It can realize software registration function and has serial number, registration code, registration status and system time information display.

■ User login

Log in by entering different user name and passwords, only when logging in can you make other settings.

■ Authority management

■ User management

You can add, delete, edit the user name and password, set the user level to restore the deleted user.

The system language can be set to switch between Chinese and English.

Different default permissions can be set according to user level.

■ language settings

User operations can be monitored to query user actions.

■ Log management About

The version and device number can be displayed.

■ T I P report

The report can be generated by the tip operation after the tip insertion function is turned on, and the content of the report: user name, number of tip insertions, number of tags, false positive rate, probability of detection, probability of false positives.

■ Tip management

It can be set to enable and disable the insertion of dangerous goods, and can set the identification time, Prompt time, insertion frequency, proportion of single items inserted into dangerous goods, add tip files and delete files.

■ Document management

It can query, open, and export the checked image.

■ Function setting

It can set log level, save the file time, whether to open the training function and setting the smart roller.

■ Data setting

Display system working hours, the total working hours of the ray source, the total number of system baggage and packages, and the total number of baggage packages this time, and clear the above data.

■ System parameter setting

It can select the exported data, pictures, and backup directory, select and adjust the motor type, detector type, whether to enable the debug mode, model, and gain, enter the corresponding IP address on network connection to realize sharing function, and have corresponding software to achieve system upgrade.

Compliance

- International
- *Health Inspection Report

■ National

- *Computer Software Copyright Registration Certificate
- *Software Product Registration Certificate
- *Radiation Safety Certificate from Ministry of Public Security
- *Quality Certification from Safety and Police Electronic Products Quality Inspection Center

*ISO19001; SO14001; ISO27001; OHSMS18001; CE, ROHS, FCC, REACH, USA, FDA

*Design pantent certification.



